



# Envoy® 110 & Bandit® 112

## TransTube® Series Amplifiers



Operating  
Manual



Intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



Intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

**CAUTION:** Risk of electrical shock — DO NOT OPEN!

**CAUTION:** To reduce the risk of electric shock, do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.

**WARNING:** To prevent electrical shock or fire hazard, this apparatus should not be exposed to rain or moisture, and objects filled with liquids, such as vases, should not be placed on this apparatus. Before using this apparatus, read the operating guide for further warnings.



Este símbolo tiene el propósito, de alertar al usuario de la presencia de “(voltaje) peligroso” sin aislamiento dentro de la caja del producto y que puede tener una magnitud suficiente como para constituir riesgo de descarga eléctrica.



Este símbolo tiene el propósito de alertar al usuario de la presencia de instrucciones importantes sobre la operación y mantenimiento en la información que viene con el producto.

**PRECAUCION:** Riesgo de descarga eléctrica ¡NO ABRIR!

**PRECAUCION:** Para disminuir el riesgo de descarga eléctrica, no abra la cubierta. No hay piezas útiles dentro. Deje todo mantenimiento en manos del personal técnico cualificado.

**ADVERTENCIA:** Para prevenir choque eléctrico o riesgo de incendios, este aparato no se debe exponer a la lluvia o a la humedad. Los objetos llenos de líquidos, como los floreros, no se deben colocar encima de este aparato. Antes de usar este aparato, lea la guía de funcionamiento para otras advertencias.



Ce symbole est utilisé dans ce manuel pour indiquer à l'utilisateur la présence d'une tension dangereuse pouvant être d'amplitude suffisante pour constituer un risque de choc électrique.



Ce symbole est utilisé dans ce manuel pour indiquer à l'utilisateur qu'il ou qu'elle trouvera d'importantes instructions concernant l'utilisation et l'entretien de l'appareil dans le paragraphe signalé.

**ATTENTION:** Risques de choc électrique — NE PAS OUVRIR!

**ATTENTION:** Afin de réduire le risque de choc électrique, ne pas enlever le couvercle. Il ne se trouve à l'intérieur aucune pièce pouvant être réparée par l'utilisateur. Confiez l'entretien et la réparation de l'appareil à un réparateur Peavey agréé.

**AVIS:** Dans le but de réduire les risques d'incendie ou de décharge électrique, cet appareil ne doit pas être exposé à la pluie ou à l'humidité et aucun objet rempli de liquide, tel qu'un vase, ne doit être posé sur celui-ci. Avant d'utiliser de cet appareil, lisez attentivement le guide fonctionnant pour avertissements supplémentaires.



Dieses Symbol soll den Anwender vor unisolierten gefährlichen Spannungen innerhalb des Gehäuses warnen, die von Ausreichender Stärke sind, um einen elektrischen Schlag verursachen zu können.



Dieses Symbol soll den Benutzer auf wichtige Instruktionen in der Bedienungsanleitung aufmerksam machen, die Handhabung und Wartung des Produkts betreffen.

**VORSICHT:** Risiko — Elektrischer Schlag! Nicht öffnen!


**VORSICHT:** Um das Risiko eines elektrischen Schlages zu vermeiden, nicht die Abdeckung entfernen. Es befinden sich keine Teile darin, die vom Anwender repariert werden könnten. Reparaturen nur von qualifiziertem Fachpersonal durchführen lassen.

**WARNUNG:** Um elektrischen Schlag oder Brandgefahr zu verhindern, sollte dieser Apparat nicht Regen oder Feuchtigkeit ausgesetzt werden und Gegenstände mit Flüssigkeiten gefüllt, wie Vasen, nicht auf diesen Apparat gesetzt werden. Bevor dieser Apparat verwendet wird, lesen Sie bitte den Funktionsführer für weitere Warnungen.

## IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** When using electrical products, basic cautions should always be followed, including the following:



1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any of the ventilation openings. Install in accordance with manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding plug. The wide blade or third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point they exit from the apparatus.
11. Only use attachments/accessories provided by the manufacturer.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13.  Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as when power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Never break off the ground pin. Write for our free booklet "Shock Hazard and Grounding." Connect only to a power supply of the type marked on the unit adjacent to the power supply cord.
16. If this product is to be mounted in an equipment rack, rear support should be provided.
17. Note for UK only: If the colors of the wires in the mains lead of this unit do not correspond with the terminals in your plug, proceed as follows:
  - a) The wire that is colored green and yellow must be connected to the terminal that is marked by the letter E, the earth symbol, colored green or colored green and yellow.
  - b) The wire that is colored blue must be connected to the terminal that is marked with the letter N or the color black.
  - c) The wire that is colored brown must be connected to the terminal that is marked with the letter L or the color red.
18. This electrical apparatus should not be exposed to dripping or splashing and care should be taken not to place objects containing liquids, such as vases, upon the apparatus.
19. Exposure to extremely high noise levels may cause a permanent hearing loss. Individuals vary considerably in susceptibility to noise-induced hearing loss, but nearly everyone will lose some hearing if exposed to sufficiently intense noise for a sufficient time. The U.S. Government's Occupational Safety and Health Administration (OSHA) has specified the following permissible noise level exposures:

Duration Per Day In Hours	Sound Level dBA, Slow Response
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 or less	115


According to OSHA, any exposure in excess of the above permissible limits could result in some hearing loss. Earplugs or protectors to the ear canals or over the ears must be worn when operating this amplification system in order to prevent a permanent hearing loss, if exposure is in excess of the limits as set forth above. To ensure against potentially dangerous exposure to high sound pressure levels, it is recommended that all persons exposed to equipment capable of producing high sound pressure levels such as this amplification system be protected by hearing protectors while this unit is in operation.

**SAVE THESE INSTRUCTIONS!**

## WICHTIGE SICHERHEITSHINWEISE



**ACHTUNG:** Beim Einsatz von Elektrogeräten müssen u.a. grundlegende Vorsichtsmaßnahmen befolgt werden:

1. Lesen Sie sich diese Anweisungen durch.
2. Bewahren Sie diese Anweisungen auf.
3. Beachten Sie alle Warnungen.
4. Befolgen Sie alle Anweisungen.
5. Setzen Sie dieses Gerät nicht in der Nähe von Wasser ein.
6. Reinigen Sie es nur mit einem trockenen Tuch.
7. Blockieren Sie keine der Lüftungsöffnungen. Führen Sie die Installation gemäß den Anweisungen des Herstellers durch.
8. Installieren Sie das Gerät nicht neben Wärmequellen wie Heizungen, Heizgeräten, Öfen oder anderen Geräten (auch Verstärkern), die Wärme erzeugen.
9. Beeinträchtigen Sie nicht die Sicherheitswirkung des gepolten Steckers bzw. des Erdungssteckers. Ein gepolter Stecker weist zwei Stifte auf, von denen einer breiter ist als der andere. Ein Erdungsstecker weist zwei Stifte und einen dritten Erdungsstift auf. Der breite Stift bzw. der dritte Stift dient Ihrer Sicherheit. Sollte der beiliegende Stecker nicht in Ihre Steckdose passen, wenden Sie sich bitte an einen Elektriker, um die ungeeignete Steckdose austauschen zu lassen.
10. Schützen Sie das Netzkabel, sodass niemand darauf tritt oder es geknickt wird, insbesondere an Steckern oder Buchsen und ihren Austrittsstellen aus dem Gerät.
11. Verwenden Sie nur die vom Hersteller erhältlichen Zubehörgeräte oder Zubehörteile.
12.  Verwenden Sie nur einen Wagen, Stativ, Dreifuß, Träger oder Tisch, der den Angaben des Herstellers entspricht oder zusammen mit dem Gerät verkauft wurde. Wird ein Wagen verwendet, bewegen Sie den Wagen mit dem darauf befindlichen Gerät besonders vorsichtig, damit er nicht umkippt und möglicherweise jemand verletzt wird.
13. Trennen Sie das Gerät während eines Gewitters oder während längerer Zeiträume, in denen es nicht benutzt wird, von der Stromversorgung.
14. Lassen Sie sämtliche Wartungsarbeiten von qualifizierten Kundendiensttechnikern durchführen. Eine Wartung ist erforderlich, wenn das Gerät in irgendeiner Art beschädigt wurde, etwa wenn das Netzkabel oder der Netzstecker beschädigt wurden, Flüssigkeit oder Gegenstände in das Gerät gelangt sind, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht normal arbeitet oder heruntergefallen ist.
15. Der Erdungsstift darf nie entfernt werden. Auf Wunsch senden wir Ihnen gerne unsere kostenlose Broschüre „Shock Hazard and Grounding“ (Gefahr durch elektrischen Schlag und Erdung) zu. Schließen Sie nur an die Stromversorgung der Art an, die am Gerät neben dem Netzkabel angegeben ist.
16. Wenn dieses Produkt in ein Geräte-Rack eingebaut werden soll, muss eine Versorgung über die Rückseite eingerichtet werden.
17. Hinweis – Nur für Großbritannien: Sollte die Farbe der Drähte in der Netzleitung dieses Geräts nicht mit den Klemmen in Ihrem Stecker übereinstimmen, gehen Sie folgendermaßen vor:
  - a) Der grün-gelbe Draht muss an die mit E (Symbol für Erde) markierte bzw. grüne oder grün-gelbe Klemme angeschlossen werden.
  - b) Der blaue Draht muss an die mit N markierte bzw. schwarze Klemme angeschlossen werden.
  - c) Der braune Draht muss an die mit L markierte bzw. rote Klemme angeschlossen werden.
18. Dieses Gerät darf nicht ungeschützt Wassertropfen und Wasserspritzern ausgesetzt werden und es muss darauf geachtet werden, dass keine mit Flüssigkeiten gefüllten Gegenstände, wie z. B. Blumenvasen, auf dem Gerät abgestellt werden.
19. Belastung durch extrem hohe Lärmpegel kann zu dauerhaftem Gehörverlust führen. Die Anfälligkeit für durch Lärm bedingten Gehörverlust ist von Mensch zu Mensch verschieden, das Gehör wird jedoch bei jedem in gewissem Maße geschädigt, der über einen bestimmten Zeitraum ausreichend starkem Lärm ausgesetzt ist. Die US-Arbeitsschutzbehörde (Occupational and Health Administration, OSHA) hat die folgenden zulässigen Pegel für Lärmbelastung festgelegt:

Dauer pro Tag in Stunden	Geräuschpegel dBA, langsame Reaktion
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 oder weniger	115

Laut OSHA kann jede Belastung über den obenstehenden zulässigen Grenzwerten zu einem gewissen Gehörverlust führen. Sollte die Belastung die obenstehenden Grenzwerte übersteigen, müssen beim Betrieb dieses Verstärkungssystems Ohrstöpsel oder Schutzvorrichtungen im Gehörgang oder über den Ohren getragen werden, um einen dauerhaften Gehörverlust zu verhindern. Um sich vor einer möglicherweise gefährlichen Belastung durch hohe Schalldruckpegel zu schützen, wird allen Personen empfohlen, die mit Geräten arbeiten, die wie dieses Verstärkungssystem hohe Schalldruckpegel erzeugen können, beim Betrieb dieses Geräts einen Gehörschutz zu tragen.


**BEWAHREN SIE DIESE SICHERHEITSHINWEISE AUF!**



## INSTRUCTIONS IMPORTANTES DE SECURITE

ATTENTION: L'utilisation de tout appareil électrique doit être soumise aux précautions d'usage incluant:



1. Lire ces instructions.
2. Gardez ce manuel pour de futures références.
3. Prêtez attention aux messages de précautions de ce manuel.
4. Suivez ces instructions.
5. N'utilisez pas cette unité proche de plans d'eau.
6. N'utilisez qu'un tissu sec pour le nettoyage de votre unité.
7. N'obstruez pas les systèmes de refroidissement de votre unité et installez votre unité en fonction des instructions de ce manuel.
8. Ne positionnez pas votre unité à proximité de toute source de chaleur.
9. Connectez toujours votre unité sur une alimentation munie de prise de terre utilisant le cordon d'alimentation fourni.
10. Protégez les connecteurs de votre unité et positionnez les cablages pour éviter toutes déconnexions accidentelles.
11. N'utilisez que des fixations approuvées par le fabricant.
12. Lors de l'utilisation sur pied ou pole de support, assurez dans le cas de déplacement de l'ensemble enceinte/ support de prévenir tout basculement intempestif de celui-ci.
13.  Il est conseillé de déconnecter du secteur votre unité en cas d'orage ou de durée prolongée sans utilisation.
14. Seul un technicien agréé par le fabricant est à même de réparer/contrôler votre unité. Celle-ci doit être contrôlée si elle a subi des dommages de manipulation, d'utilisation ou de stockage (humidité,...).
15. Ne déconnectez jamais la prise de terre de votre unité.
16. Si votre unité est destinée à être montée en rack, des supports arrière doivent être utilisés.
17. Note pour les Royaumes-Unis: Si les couleurs de connecteurs du câble d'alimentation ne correspondent pas au guide de la prise secteur, procédez comme suit:
  - a) Le connecteur vert et jaune doit être connecter au terminal noté E, indiquant la prise de terre ou correspondant aux couleurs verte ou verte et jaune du guide.
  - b) Le connecteur Bleu doit être connecter au terminal noté N, correspondant à la couleur noire du guide.
  - c) Le connecteur marron doit être connecter au terminal noté L, correspondant à la couleur rouge du guide.
18. Cet équipement électrique ne doit en aucun cas être en contact avec un quelconque liquide et aucun objet contenant un liquide, vase ou autre ne devrait être posé sur celui-ci.
19. Une exposition à de hauts niveaux sonores peut conduire à des dommages de l'écoute irréversibles. La susceptibilité au bruit varie considérablement d'un individu à l'autre, mais une large majorité de la population expérimentera une perte de l'écoute après une exposition à une forte puissance sonore pour une durée prolongée. L'organisme de la santé américaine (OSHA) a produit le guide ci-dessous en rapport à la perte occasionnée:

Durée par Jour (heures)	Niveau sonore moyen (dBA)
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 ou inférieur	115


D'après les études menées par le OSHA, toute exposition au delà des limites décrites ce-dessus entrainera des pertes de l'écoute chez la plupart des sujets. Le port de système de protection (casque, oreillette de filtrage,...) doit être observé lors de l'opération cette unité ou des dommages irréversibles peuvent être occasionnés. Le port de ces systèmes doit être observé par toutes personnes susceptibles d'être exposées à des conditions au delà des limites décrites ci-dessus.

**GARDEZ CES INSTRUCTIONS!**

## INSTRUCCIONES IMPORTANTES PARA SU SEGURIDAD



**CUIDADO:** Cuando use productos electrónicos, debe tomar precauciones básicas, incluyendo las siguientes:

1. Lea estas instrucciones.
2. Guarde estas instrucciones.
3. Haga caso de todos los consejos.
4. Siga todas las instrucciones.
5. No usar este aparato cerca del agua.
6. Limpiar solamente con una tela seca.
7. No bloquear ninguna de las salidas de ventilación. Instalar de acuerdo a las instrucciones del fabricante.
8. No instalar cerca de ninguna fuente de calor como radiadores, estufas, hornos u otros aparatos (incluyendo amplificadores) que produzcan calor.
9. No retire la patilla protectora del enchufe polarizado o de tipo "a Tierra". Un enchufe polarizado tiene dos puntas, una de ellas más ancha que la otra. Un enchufe de tipo "a Tierra" tiene dos puntas y una tercera "a Tierra". La punta ancha (la tercera) se proporciona para su seguridad. Si el enchufe proporcionado no encaja en su enchufe de red, consulte a un electricista para que reemplaze su enchufe obsoleto.
10. Proteja el cable de alimentación para que no sea pisado o pinchado, particularmente en los enchufes, huecos, y los puntos que salen del aparato.
11. Usar solamente añadidos/accesorios proporcionados por el fabricante.
12.  Usar solamente un carro, pie, trípode, o soporte especificado por el fabricante, o vendido junto al aparato. Cuando se use un carro, tenga cuidado al mover el conjunto carro/aparato para evitar que se dañe en un vuelco. No suspenda esta caja de ninguna manera.
13. Desenchufe este aparato durante tormentas o cuando no sea usado durante largos periodos de tiempo.
14. Para cualquier reparación, acuda a personal de servicio cualificado. Se requieren reparaciones cuando el aparato ha sido dañado de alguna manera, como cuando el cable de alimentación o el enchufe se han dañado, algún líquido ha sido derramado o algún objeto ha caído dentro del aparato, el aparato ha sido expuesto a la lluvia o la humedad, no funciona de manera normal, o ha sufrido una caída.
15. Nunca retire la patilla de Tierra. Escríbanos para obtener nuestro folleto gratuito "Shock Hazard and Grounding" ("Peligro de Electrocución y Toma a Tierra"). Conecte el aparato sólo a una fuente de alimentación del tipo marcado al lado del cable de alimentación.
16. Si este producto va a ser enracado con más equipo, use algún tipo de apoyo trasero.
17. Nota para el Reino Unido solamente: Si los colores de los cables en el enchufe principal de esta unidad no corresponden con los terminales en su enchufe, proceda de la siguiente manera:
  - a) El cable de color verde y azul debe ser conectado al terminal que está marcado con la letra E, el símbolo de Tierra (earth), coloreado en verde o en verde y amarillo.
  - b) El cable coloreado en azul debe ser conectado al terminal que está marcado con la letra N o el color negro.
  - c) El cable coloreado en marrón debe ser conectado al terminal que está marcado con la letra L o el color rojo.
18. Este aparato eléctrico no debe ser sometido a ningún tipo de goteo o salpicadura y se debe tener cuidado para no poner objetos que contengan líquidos, como vasos, sobre el aparato.
19. La exposición a altos niveles de ruido puede causar una pérdida permanente en la audición. La susceptibilidad a la pérdida de audición provocada por el ruido varía según la persona, pero casi todo el mundo perderá algo de audición si se expone a un nivel de ruido suficientemente intenso durante un tiempo determinado. El Departamento para la Salud y para la Seguridad del Gobierno de los Estados Unidos (OSHA) ha especificado las siguientes exposiciones al ruido permisibles:

Duración por Día en Horas	Nivel de Sonido dBA, Respuesta Lenta
8	90
6	92
4	95
3	97
2	100
1 1/2	102
1	105
1/2	110
1/4 o menos	115

De acuerdo al OSHA, cualquier exposición que exceda los límites arriba indicados puede producir algún tipo de pérdida en la audición. Protectores para los canales auditivos o tapones para los oídos deben ser usados cuando se opere con este sistema de sonido para prevenir una pérdida permanente en la audición, si la exposición excede los límites indicados más arriba. Para protegerse de una exposición a altos niveles de sonido potencialmente peligrosa, se recomienda que todas las personas expuestas a equipamiento capaz de producir altos niveles de presión sonora, tales como este sistema de amplificación, se encuentren protegidas por protectores auditivos mientras esta unidad esté operando.

**GUARDE ESTAS INSTRUCCIONES!**

## **Envoy® 110 and Bandit® 112**

### **TransTube® Series Instrument Amplifiers**

So, you are the owner of a new Peavey TransTube Series instrument amplifier. Congratulations! Whether you are a beginner or seasoned pro, you could not have found a more practical, feature-packed amplifier.

Peavey's patented TransTube circuitry has moved forward into the third generation of products, leading the industry in tube emulation. There is no other solid-state amp that more closely replicates the characteristics of a tube amp.



Before you begin playing through your amplifier, it is very important to ensure that the product has the proper AC line voltage supplied. You can find the proper voltage for your amp printed next to the IEC line (power) cord on the rear panel of the unit. Each product feature is numbered. Refer to the front panel diagram in this manual to locate the particular features next to it's number.

Please read this guide carefully to ensure your personal safety as well as the safety of your TransTube amplifier.

#### **COMMON FEATURES:**

- High and Low Gain Inputs accommodate a variety of instruments
- Two distinct TransTube channels each featuring:
  - Separate Volume/Gain controls
  - Low, Mid and High EQ
  - EQ/Gain voicing switches
- Channel select switch on front panel
- Reverb with reverb level control

#### **ENVOY 110 FEATURES:**

- 10" Blue Marvel® speaker
- 40 watt power amplifier
- Preamp output
- Headphone jack
- Footswitchable boost and channel selection
- Speaker Simulated Direct Output

 
#### **BANDIT 112 FEATURES**

- 12" Blue Marvel® speaker
- 100 watt power amplifier (80 watts into internal speaker)
- Footswitchable boost and channel selection
- Effects Loop
- Speaker Simulated Direct Output with adjustable level
- External speaker jack



**VENTILATION:** For proper ventilation, allow 24" clearance from nearest combustible surface.

## Front Panel

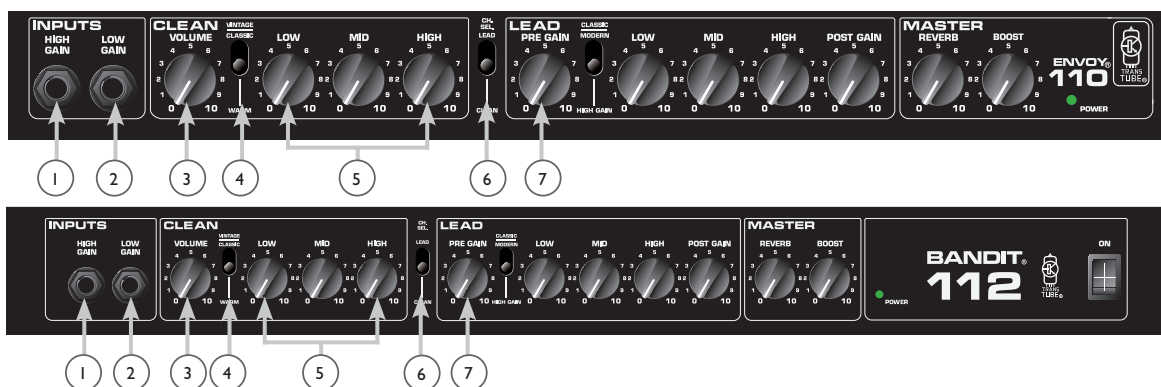

### 1 HIGH GAIN INPUT

Used for most electric guitars. The High Gain Input is 6 dB louder than the Low Gain Input (2).

### 2 LOW GAIN INPUT

Provided for instruments with extremely high outputs, which can result in overdriving (distorting) the High Gain Input (1). If both inputs are used simultaneously, their levels are both Low Gain.

### 3 VOLUME

This control sets the volume level for the Clean channel.

### 4 VINTAGE/CLASSIC/WARM SWITCH

The CLASSIC position maintains a standard voicing. The VINTAGE position changes the overall function of the EQ and adds a hint of brightness to emulate classic amp designs. The WARM setting also reconfigures the EQ and is provided for darker sounds. Experiment with this switch, along with Clean EQ (5) adjustments, to capture your desired tone. Refer to page 12 for suggested settings.

### 5 CLEAN EQ

These passive tone controls regulate the low, mid, and high frequencies of the Clean channel.

 
### 6 CHANNEL SELECT SWITCH

The Channel Select Switch determines which channel, LEAD or CLEAN, is active. This switch must be in the "LEAD" position in order for the footswitch to function.

### 7 PRE GAIN

The Pre Gain controls the input volume level of the Lead channel.



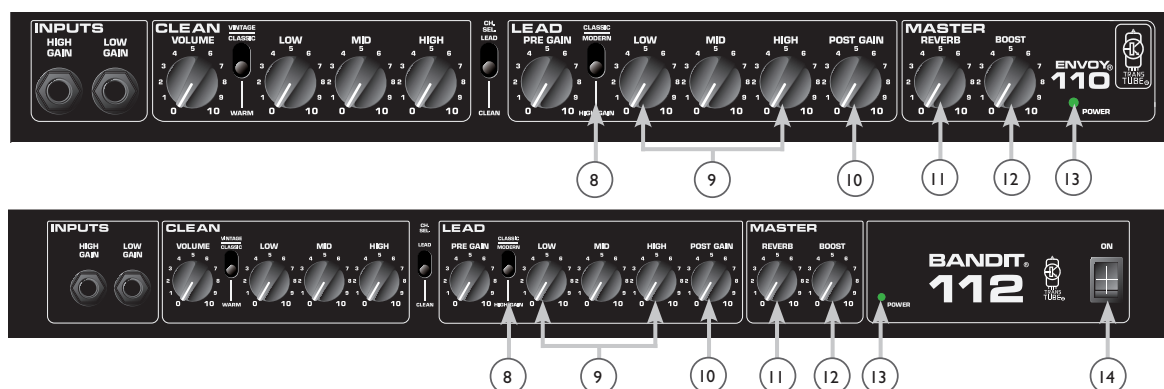

## 8 CLASSIC/MODERN/HIGH GAIN - SWITCH

This switch changes both the gain and voicing of the Lead channel. The MODERN setting increases the overall gain and notches (cuts) the mid frequencies, establishing a modern tone often associated with Hard Rock and Metal styles. The CLASSIC setting emulates overdriven tube sounds of the past. The HIGH GAIN setting increases the overall gain and changes the EQ, creating a tighter response at lower Pre Gain settings or an “over the top” sound at higher Pre Gain settings. Experiment with this switch setting while adjusting the Lead EQ (9) to help you obtain your desired tone. Refer to page 12 for suggested settings.

## 9 LEAD EQ

These passive tone controls regulate the low, mid, and high frequencies of the Lead channel.

## 10 POST GAIN

Use this control to set the overall level of the Lead channel once your tone has been achieved.

## 11 REVERB

The Reverb control adjusts the overall reverb level.

## 12 VOLUME BOOST

This knob functions as a limited master volume control without the footswitch. For solo's and loud passages, use the footswitch to boost the volume by 0 - 10dB.

 
## 13 POWER LED

This LED illuminates indicating the amp is on.

## 14 POWER SWITCH (Located on the rear panel of the Envoy 110.)

To apply power to the unit, press the switch to the "on" position. The LED (13) will illuminate, indicating power is being supplied.

## Rear Panel

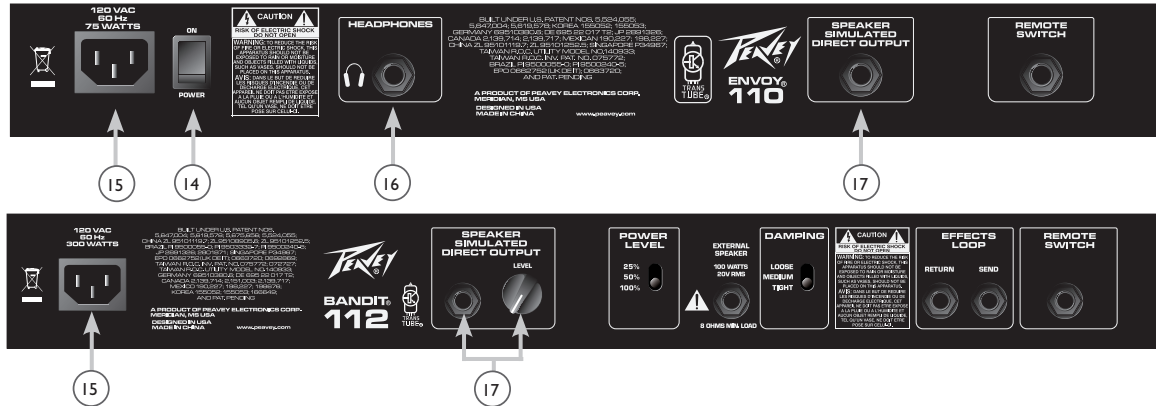

### 15 AC POWER INLET (Power Cord Located Under Chassis)

This is the receptacle for an IEC line cord, which provides AC power tot the unit. Connect the line cord to this connector to provide power to the unit. Damage to the equipment may result if improper line volt- age is used. (See voltage marking on unit.)

Never break off the ground pin on any equipment. It is provided for your safety. If the outlet used does not have a ground pin, a suitable grounding adapter should be used and the third wire should be grounded properly. To prevent the risk of shock or fire hazard, always make sure that the amplifier and all associated equipment is properly grounded.

#### NOTE: FOR UK ONLY

As the colors of the wires in the mains lead of this apparatus may not correspond with the colored mark- ings identifying the terminals in your plug, proceed as follows: (1) The wire which is colored green and yellow must be connected to the terminal which is marked by the letter E, or by the earth symbol, or colored green or green and yellow. (2) The wire which is colored blue must be connected to the terminal which is marked with the letter N, or the color black. (3) The wire which is colored brown must be con- nected to the terminal which is marked with the letter L, or the color red.

To avoid the risk of electrical shock, do not place fingers or any other objects into empty tube sockets while power is being supplied to unit.

 
### 16 HEADPHONE JACK (Envoy 110 ONLY)

This stereo 1/4" jack accepts a standard pair of headphones. Using this jack defeats the output to the speaker making it ideal for quiet practice applications.

### 17 SPEAKER SIMULATED DIRECT OUTPUT

The signal produced in this convenient 1/4" direct output jack is specifically voiced to accurately simu- late speaker cabinet response. The output can be used for direct recordings or sent to a mixer or PA system. Users can adjust output levels with the adjacent control knob (Bandit 112 Only).

## Rear Panel

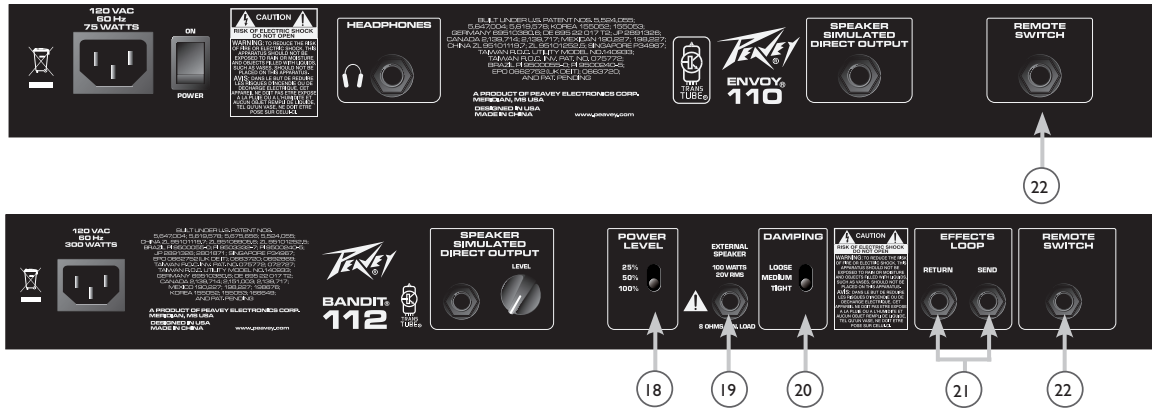

### 18 POWER LEVEL (Bandit 112 ONLY)

This switch provides three power level options: 25%, 50% and 100%. This circuit is actually a patented tube power amplifier simulator that "squashes" the signal. Use as desired for different playing environments, for example an apartment at 25% or live big at 100%.

### 19 EXTERNAL SPEAKER JACK (Bandit 112 ONLY)

This 1/4" jack is provided for the connection of an external speaker cabinet. The minimum external speaker impedance is 8 ohms.

### 20 DAMPING (Bandit 112 ONLY)

This three position switch offers damping level adjustment; loose, medium and tight.

### 21 EFFECTS LOOP (Bandit 112 ONLY)

This pair of mono 1/4" jacks provides an effects SEND and RETURN path for the preamp signal. Connect the SEND jack to the input of an external, low-level, signal processing effects unit. Return the signal from your external effects unit to the RETURN jack. This setup is known as an Effects Loop since the signal exits your amp (send) and loops (return) back to it.

### 22 REMOTE SWITCH

 
The multi-functional remote footswitch is used to select between the Clean and Lead channels as well as to boost the volume.

**NOTE:** On both units, the Channel Select Switch (6) must be in the LEAD position for the Remote Switch to work.

## Suggested Settings

### Clean

### Metal

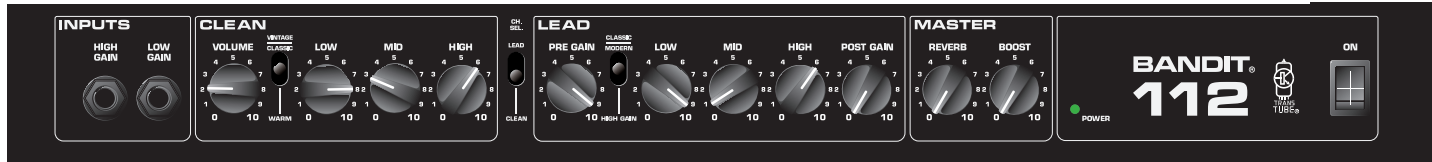

#### Clean Channel:

Volume: As Desired  
Classic  
Low: 7-9  
Mid: 2-4  
High: 5-7

#### Lead Channel:

 
Pre Gain: 8-10  
High Gain/ModerateClassic: Moderate  
Low: 8-10  
Mid: 0-2  
High: 6-8  
Post Gain: As Desired

#### Master Section:

Reverb: As Desired  
Boost: As Desired for solo level

### Jazz

### Moderate Distortion

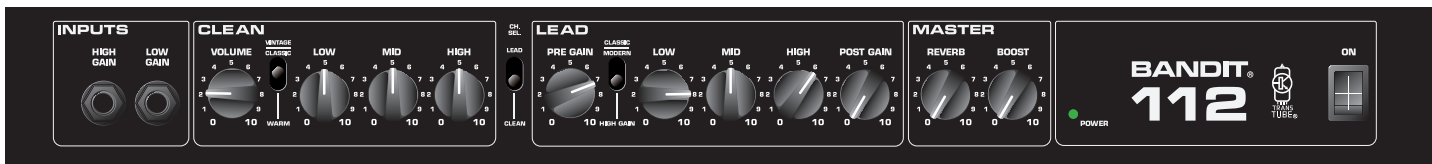

#### Clean Channel:

Volume: As Desired  
Classic  
Low: 7-9  
Mid: 6-8  
High: 3-4

#### Lead Channel:

 
Pre Gain: 3-5  
High Gain/ModerateClassic: High  
Low: 7-9  
Mid: 4-6  
High: 5-7  
Post Gain: As Desired

#### Master Section:

Reverb: As Desired  
Boost: As Desired for solo level

### Clean Blues

### Dirty Blues

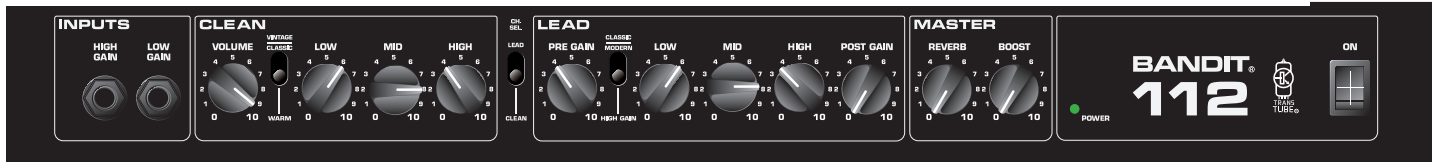

#### Clean Channel:

Volume: 8-10  
Classic  
Low: 5-7  
Mid: 7-9  
High: 3-5

#### Lead Channel:

Pre Gain: 3-5  
High Gain/ModerateClassic: Classic  
Low: 5-7  
Mid: 7-9  
High: 2-4  
Post Gain: As Desired

#### Master Section:

Reverb: As Desired  
Boost: As Desired for solo level

NOTE: The Bandit 112 is used for demonstration purposes. The settings illustrated above are also applicable to the Envoy 110.

## Series Specifications

### Envoy® 110

#### Power Amplifier Section: Power @ Clipping (Typically):

(1 kHz, 120 VAC line)

40 W RMS into 6  $\Omega$

#### Frequency Response:

+0, -2 dB 100 Hz to 20 kHz @ 35 W  
RMS into 6  $\Omega$

#### Hum and Noise:

Greater than 86 dB below rated  
power

#### Power Consumption:

##### (Domestic)

75 W @ 60 Hz, 120 VAC

##### (Export)

75 W @ 50/60 Hz, 220-240 VAC

#### Preamp Section:

The following spec are measured @  
1 kHz with the controls preset as  
follows:

Clean Mode Switch, Classic  
Lead Mode Switch, Classic  
Low and High @ 10  
Mid @ 0  
Lead Pre and Post Gain @ 10  
Lead Mode Switch, Vintage  
Reverb @ 0  
Nominal Levels are with Clean  
Volume @ 5  
Minimum Levels are with  
Clean Volume @ 10

#### Headphone Output:

Load Impedance: 16  $\Omega$  or greater  
0.3 W RMS

#### System Hum & Noise @

##### Nominal Input Level:

(20 Hz to 20 kHz unweighted)  
Greater than 78 dB below rated power

#### Speaker Simulated Direct Output Level:

0.4 V RMS Nominal

#### Equalization:

Special Low, Mid, and High passive  
type EQ.

Vintage/Classic/Warm switch (clean)  
Three distinct EQ voicings  
Classic/Modern/High gain switch (lead)  
Three different EQ and Gain voicings

#### External Footswitch Functions:

Clean or Lead channel selection  
and volume Boost

#### Dimensions (H x W x D):

17" x 19.375" x 9.250"  
43.18 cm x 49.21 cm x 23.46 cm

#### Weight:

24.5 lbs (11.13 kg)

Features and specifications subject to change without notice.



## Series Specifications

### Bandit® 112

#### Power Amplifier Section:

##### Rated Power and Load:

Power specs measured with  
Power Level @ 100%

80 W RMS into 8  $\Omega$

100 W RMS into 4  $\Omega$

##### Power @ Clipping (Typically):

(1 kHz, 120 VAC line)

80 W RMS into 8  $\Omega$

100 W RMS into 4  $\Omega$

##### Frequency Response:

+0, -3 dB 100 Hz to 20 kHz @ 65 W  
RMS into 8  $\Omega$

##### Hum and Noise:

Greater than 90 dB below rated  
power

##### Power Consumption:

(Domestic)

300 W @ 60 Hz, 120 VAC

(Export)

300 W @ 50/60 Hz, 220-230 VAC

#### Effects Send:

Load Impedance: 1 k  $\Omega$  or greater

Nominal Output Level:

-5.4 dBV, 535 mV RMS

#### Effects Return:

Load Impedance: High Z, 22 k  $\Omega$

Designed Input Level:

-5.4 dBV, 535 mV RMS

#### Boost Level @ 10:

+ 10 dB Boost

#### Speaker Simulated Direct

##### Output Level @ 10:

700 mV, -3 dBv

#### System Hum & Noise @

##### Nominal Input Level:

(20 Hz to 20 kHz unweighted)

Greater than 80 dB below rated power

#### Equalization:

Special Low, Mid, and High passive  
type EQ.

Vintage/Classic/Warm switch (clean)

Three distinct EQ voicings

Classic/Modern/High gain switch (lead)

Three different EQ and Gain voicings

#### External Footswitch Functions:

Clean or Lead channel selection

and volume Boost

#### Dimensions (H x W x D):

20.875" x 23.25" x 11.25"

53.02 cm x 59.06 cm x 28.58 cm

#### Weight:

40.9 lbs (18.55 kg)

Features and specifications subject to change without notice.

# PEAVEY ELECTRONICS CORPORATION LIMITED WARRANTY

EFFECTIVE DATE: JULY 1, 1998

## What This Warranty Covers

Your Peavey Warranty covers defects in material and workmanship in Peavey products purchased and serviced in the U.S.A. and Canada.

## What This Warranty Does Not Cover

The Warranty does not cover: (1) damage caused by accident, misuse, abuse, improper installation or operation, rental, product modification or neglect; (2) damage occurring during shipment; (3) damage caused by repair or service performed by persons not authorized by Peavey; (4) products on which the serial number has been altered, defaced or removed; (5) products not purchased from an Authorized Peavey Dealer.

## Who This Warranty Protects

This Warranty protects only the original retail purchaser of the product.

## How Long This Warranty Lasts

The Warranty begins on the date of purchase by the original retail purchaser. The duration of the Warranty is as follows:

Product Category	Duration
<b>Guitars/Basses, Amplifiers, Pre-Amplifiers, Mixers, Electronic Crossovers and Equalizers</b>	<b>2 years (+ 3 years)*</b>
<b>Drums</b>	<b>2 years (+ 1 year)*</b>
<b>Enclosures</b>	<b>3 years (+ 2 years)*</b>
<b>Digital Effect Devices and Keyboard and MIDI Controllers</b>	<b>1 year (+ 1 year)*</b>
<b>Microphones</b>	<b>2 years</b>
<b>Speaker Components (incl. speakers, baskets, drivers, diaphragm replacement kits and passive crossovers) and all Accessories</b>	<b>1 year</b>
<b>Tubes and Meters</b>	<b>90 days</b>

**[\*Denotes additional warranty period applicable if optional Warranty Registration Card is completed and returned to Peavey by original retail purchaser within 90 days of purchase.]**

## What Peavey Will Do

We will repair or replace (at Peavey's discretion) products covered by warranty at no charge for labor or materials. If the product or component must be shipped to Peavey for warranty service, the consumer must pay initial shipping charges. If the repairs are covered by warranty, Peavey will pay the return shipping charges.

## How To Get Warranty Service

- (1) Take the defective item and your sales receipt or other proof of date of purchase to your Authorized Peavey Dealer or Authorized Peavey Service Center.  
**OR**
- (2) Ship the defective item, prepaid, to Peavey Electronics Corporation, International Service Center, 412 Highway 11 & 80 East, Meridian, MS 39301 or Peavey Canada Ltd., 95 Shields Court, Markham, Ontario, Canada L3R 9T5. Include a detailed description of the problem, together with a copy of your sales receipt or other proof of date of purchase as evidence of warranty coverage. Also provide a complete return address.

## Limitation of Implied Warranties

ANY IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE LENGTH OF THIS WARRANTY.

**Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.**

## Exclusions of Damages

PEAVEY'S LIABILITY FOR ANY DEFECTIVE PRODUCT IS LIMITED TO THE REPAIR OR REPLACEMENT OF THE PRODUCT, AT PEAVEY'S OPTION. IF WE ELECT TO REPLACE THE PRODUCT, THE REPLACEMENT MAY BE A RECONDITIONED UNIT. PEAVEY SHALL NOT BE LIABLE FOR DAMAGES BASED ON INCONVENIENCE, LOSS OF USE, LOST PROFITS, LOST SAVINGS, DAMAGE TO ANY OTHER EQUIPMENT OR OTHER ITEMS AT THE SITE OF USE, OR ANY OTHER DAMAGES WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE, EVEN IF PEAVEY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

**Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.**

**This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.**

If you have any questions about this warranty or service received or if you need assistance in locating an Authorized Service Center, please contact the Peavey International Service Center at (601) 483-5365 / Peavey Canada Ltd. at (905) 475-2578.

FEATURES AND SPECIFICATIONS SUBJECT TO CHANGE WITHOUT NOTICE.



Logo referenced in Directive 2002/96/EC Annex IV (OJ(L)37/38, 13.02.03 and defined in EN 50419: 2005)  
The bar is the symbol for marking of new waste and is applied only to equipment manufactured after 13 August 2005



Features and specifications subject to change without notice.

Peavey Electronics Corporation • 711 A Street • Meridian, MS 39301  
(601) 483-5365 • FAX (601) 486-1278 • [www.peavey.com](http://www.peavey.com)